



How to change the Channel and/or Address of the CPSPulse Clicker:

1. Turn the device on.
2. Wait for Q: prompt
3. Press the two arrow buttons simultaneously and release
4. Immediately press the +- button
5. At the "Channel" prompt, enter the two-digit channel and press the send button (5)
6. At the "Address" prompt, enter the pad ID you would like to assign and press the send key twice.
7. The device will power down and the new channel and pad ID will be saved.

